

Guying the Spiderbeam 12m HD Spiderpole

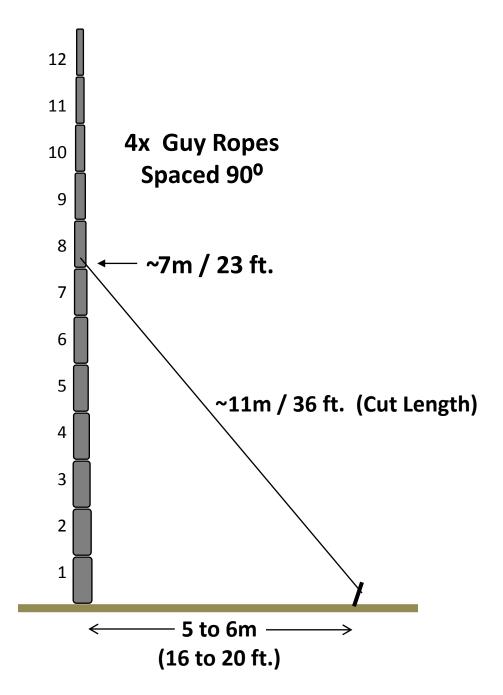

Attach 3 (preferably 4) guy lines to the pole above segment number 7 (height = 7m). We recommend a guying distance from the pole of 5 to 6m. This results in a guy line Length of approx. 11m. You will need 4x 11m = 44m of 2mm Kevlar rope. We recommend purchasing one roll (50m) of Kevlar rope and cutting it into 4 pieces, each 12m long. NOTE: 1m = 3.3 ft.

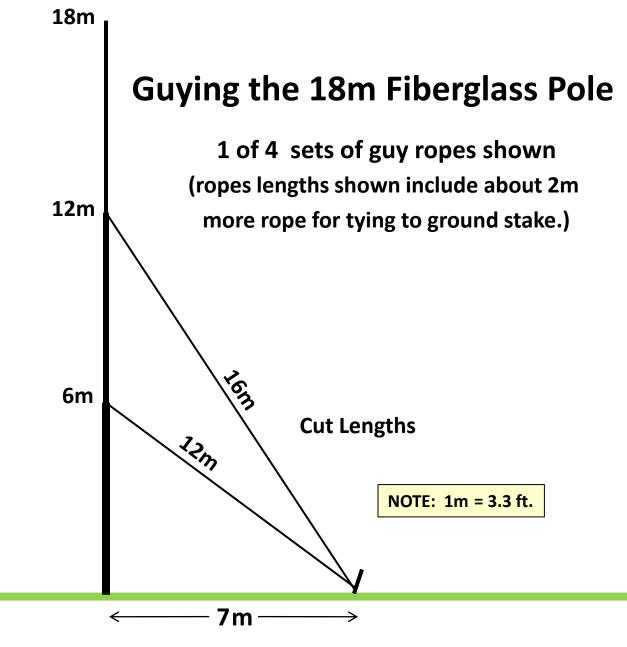

BOTTOM GUY LINE:

Attached to the pole above segment number 4 (height = 6m). We recommend a guying distance from the pole of 7m. This results in a guy line length of approx. 10m. So you need 4x10m = 40m of 2mm Kevlar here.


TOP GUY LINE:

Attached to the pole above segment number 8 (height = 12m).

We recommend a guying distance from the pole of at least 7m. This results in a guy line length of approx. 15m (min.). So you need 4x15m = 60m of 2mm Kevlar here. **In total**, we recommend to buy the following guy lines:

100m (= 2 rolls of 50m, 2mm Kevlar Rope)

Guying the Spiderbeam 22m Fiberglass Telescoping Pole

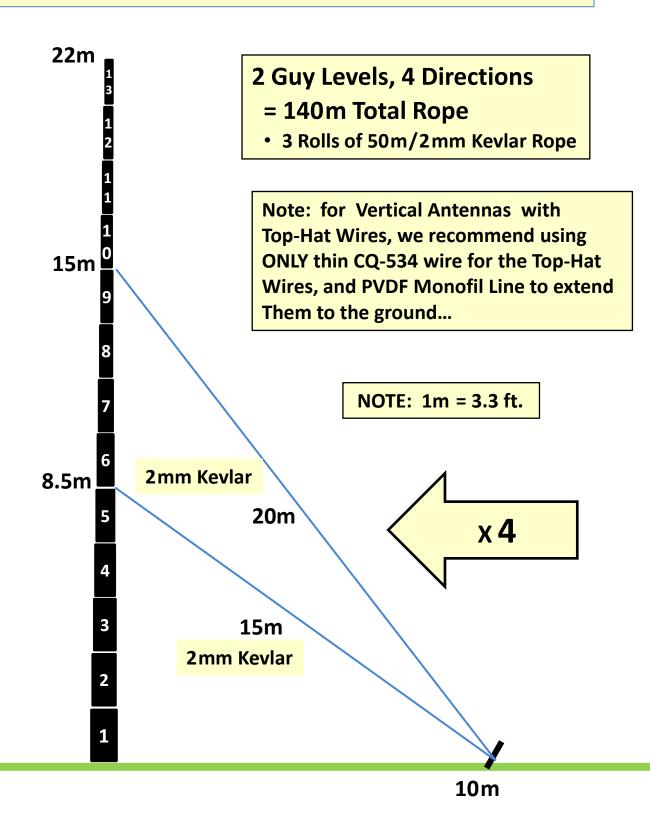

Guying the Spiderbeam 26m Fiberglass Telescoping Pole

